

RT Power logger SETUP.BIN

Spørgsmål om SETUP.BIN skal være på data logger kort.


Man konfigurerer Power Logger til at starte når den kører, og stoppe når bil ikke længere kører. Dato format på filer, og hvilken Tidszone som man befinder sig i så tids stempel på filer passer.

SETUP.BIN gemmes på logger kort. Power Logger tændes mens kort er i logger. Power Logger læser konfiguration og gemmer det i power logger internal memory.

Derefter er SETUP.BIN ikke nødvendig at have på logger kort. Men skader heller ikke, med mindre der lægges forkert SETUP.BIN på kort, så det får de-aktiveret autostart.

Hvis man har logger som er helt ny og ikke har været brugt før, så SKAL logger startes med korrekt konfigureret SETUP.BIN på logger kort, for at konfigurere logger til at starte logning automatisk. Efter denne konfiguration som gemme i logger memory, er det ikke en nødvendighed at have SETUP.BIN på kort.

Information fra Race Technology vedrørende brug af SETUP.BIN

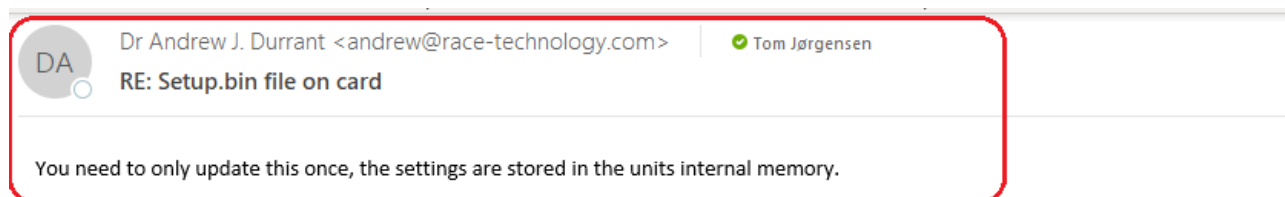

From: Tom Jørgensen <TOMJ@telenor.dk>
Sent: 18 September 2019 22:22
To: andrew@race-technology.com
Subject: Setup.bin file on card

Hi Andrew

I like to get confirmation if I understand the use of Setup.bin on datalogger card correct.

The setup.bin are used to setup datalogger when to start and stop logging if car moves, and data format stamp, and timezone . PowerLogger read the file at boot, and save configuration in Powerlogger.

After this boot, the Setup.bin are no longer needed.

And we don't need setup.bin on logger card, for logger to start logging when car move according to the earlier setup.bin configuration.

- Are my understanding correct of use setup.bin , else please correct me if I am wrong?

I understand that I could be nice always have setup.bin on card to make sure its read when boot Power logger. But no need to have

Med Venlig Hilsen / Best regards
Tom Jørgensen